

America's Longest Running Catalog

Hammacher Schlemmer

Offering the Best, the Only and the Unexpected Since 1848

 
The VHS to DVD Converter Quick Start VHS to DVD Recording Guide





Contents of a DVD can be copied to a VHS tape or vice versa. **This can only be done with material that is not copy-protected.** Copy-protected movies will typically have a copy protection warning message at the beginning of the movie.

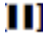

1. Insert the cassette tape to be copied.
2. Insert a recordable DVD with enough recording space.
3. Press SETUP and use ▲/▼ to select “general setting” from the menu. Press OK.
4. Use the ▲/▼ to select “Recording” and press OK.
5. Use the ▲/▼ to select “Dubbing Mode” and press OK.
6. Use the ▲/▼ to select “VCR→DVD” and press OK.
7. Press the DVD button.
8. Press the REC MODE button repeatedly to select the desired recording mode (See page 27 of the manual for recording mode descriptions).
9. Press the VCR button.
10. Press ► to find the starting location on the VHS tape. Once found press the  button at that point.
11. Press D.DUBBING.
12. Press STOP to stop the conversion.

Note: In order to play the DVD on other DVD players, you must finalize the disc. See page 42 of the manual for finalizing instructions.

- After starting VCR to DVD duplication, the picture may be distorted because of the auto tracking function. This is not a malfunction. Be advised to play back the tape until the picture is stabilized, then set the starting point which you wish to start recording, and start VCR to DVD duplication.
- This unit will automatically stop the duplication if playback with no image is detected for more than 3 minutes.
- Playback sound mode of the dubbed contents is determined by the playback sound mode of the VCR at the point of dubbing.